

# Air Cruiser

Inboard Armrest: OPTION ONLY

Fore/Aft Isolator: Slide handle inward to lock or out to unlock.

Fore/Aft Adjustment: Pull handle up to move seat forward or rearward.



Recliner Adjustment Handle: Pull up on the handle to adjust the seat back angle.

Dual Lumbar: Press switch to adjust upper and lower Lumbar.

Height Adjustment: Press up or down to adjust the height of the seat.